

CHANGING THE CIRCULAR KNIFE

www.keencut.co.uk



BEWARE - THE CIRCULAR BLADES
ARE VERY SHARP DO NOT HANDLE
THE OUTER EDGES OF THE BLADE.

WEAR FINGER PROTECTION WHEN
CHANGING THE BLADE.

Hold the hexagonal end of the shaft stationary with a 10mm spanner/wrench and turn the dome headed nut adjacent to the blade anticlockwise using an 8mm spanner/wrench and remove it.

Remove the washer and worn blade.

DISCARD THE WORN BLADE IN A SAFE MANNER - IT WILL STILL BE SHARP.

Place a new blade on the shaft ensuring the red plastic guard is properly located, replace the washer and dome nut. Tighten the nut (whilst holding the shaft stationary with the 10mm spanner/wrench) DO NOT OVER TIGHTEN OR THE BLADE WILL CRACK.

